

Specifications

Model Number: 10-0127
Input Voltage: 230v AC
Frequency: 50/60 Hz.
Lamp Type: See Chart On Back
Certifications: UL #E191525
Size: 9.5" x 1.72" x 1.0"
Weight: 14 oz.
Mounting: Slotted Mounting Tabs



1. Ground case in accordance with the National Electric Code.
2. Remote mounting distance varies with lamp type, consult factory with requirements.
3. Cap and insulate any unused RED wire individually.
4. When connecting two, three, or four RED wires, they must be joined to make one wire before connecting to the lampholder.
5. For miniature bipin lamps as well as medium bipin lamps, add jumper between socket contacts, of the lampholder, before connecting the RED and YELLOW wires. (See over)



| | | | | |
|---|---|--|---|--|
| <p>10-0127 230V/50/60 HZ</p> | <p>No. 00-0008 ATLANTIC ULTRAVIOLET CORPORATION 375 Marcus Boulevard • Hauppauge, NY 11788 631.273.0500 • Fax: 631.273.0771 info@ultraviolet.com • www.ultraviolet.com www.buyultraviolet.com</p> | <p>INPUT: 230VAC 50/60HZ MAXIMUM CURRENT: 3.0 A REL. EMI: FCC Part 18A SOUND RATING CLASS: A MIN. LAMP TYPE: See Lamp Specs TYPE: 1 or 2 Outdoor MAX. VOLTAGE OUTPUT: 400 VAC CIRCUIT OR TO GROUND: Minus 20°F INSTANT START HIGH POWER FACTOR TYPE CCC</p> | <p>Danger High Voltage - Ballast case must be grounded in accordance with National Electric code. Disconnect input power before installing or servicing. For wiring information, see instruction sheet.</p> <p>APPROVED FOR LAMP COMBINATION OF 128W MAX.: CFT4P, CFC4P, CFT4P, CFT4P, 204P, CR24P, CR24P, CR24P (FREQ. 14, 15K, 15, 15K, 15, 15K) AND T12 AND T12HO WHEN USED PER WIRING DIAGRAM SUITABLE FOR AIR HANDLING SPACES. TYPE 14 APPROVED</p> | <p>Surelite™ ELECTRONIC BALLAST</p> <p>#E191525 FLUORESCENT LAMP BALLAST SHEP</p> |
| | <p>APPROVED FOR LAMP COMBINATION OF 128W MAX.: CFT4P, CFC4P, CFT4P, CFT4P, 204P, CR24P, CR24P, CR24P (FREQ. 14, 15K, 15, 15K, 15, 15K) AND T12 AND T12HO WHEN USED PER WIRING DIAGRAM SUITABLE FOR AIR HANDLING SPACES. TYPE 14 APPROVED</p> | | | |



The information and recommendations contained in this publication are based upon data collected by the Atlantic Ultraviolet Corporation® and are believed to be correct. However, no guarantee or warranty of any kind, expressed or implied, is made with respect to the information contained herein. Specifications and information are subject to change without notice.

Lamp Types

| Lamp Types | Wiring Diagram |
|---|----------------|
| MIGHTY★PURE® MP49C Lamp Part No. 05-1334-R | 1 |
| SANITRON® S50C Lamp Part No 05-1334-R | 1 |
| G12T5 - G64T5 | 1 |
| GPH212T5 - GPH1554T5 | 2 |
| GHO18T5 - GHO48T5 | 3 |
| GPH436T5/HO - GPH1148T5/HO | 4 |

This ballast may be acceptable for use with lamps not listed here. Contact us to discuss your requirement.

Wiring Diagrams

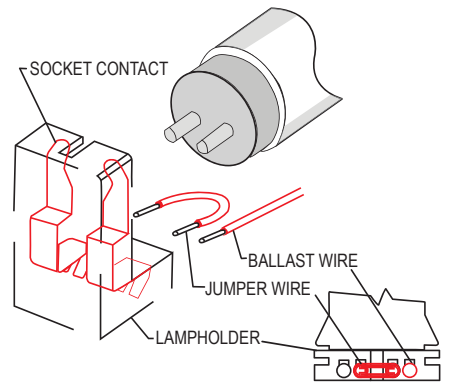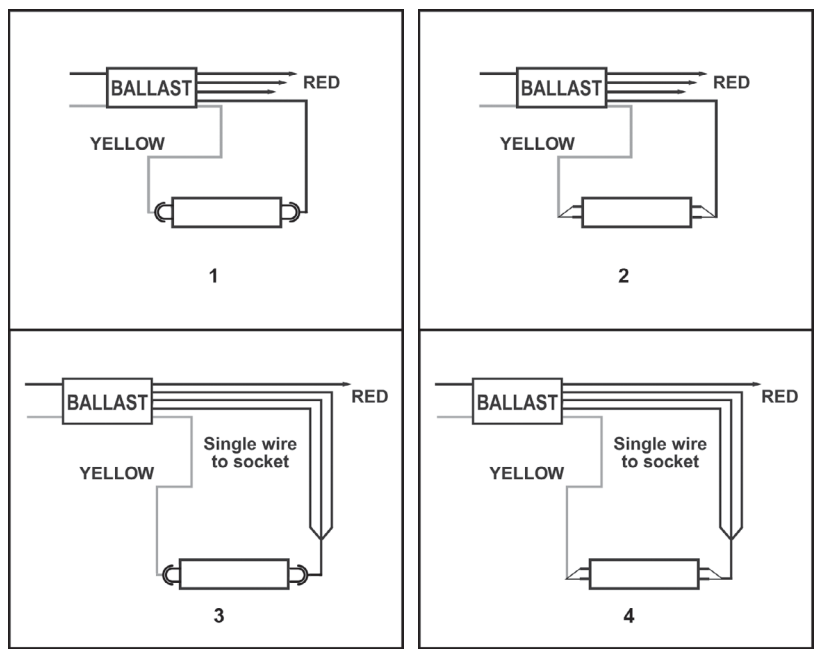


NOTE: For 4-Pin Single Ended Lamps, See Wiring Diagram Below.

Wiring Jumper Detail

For Miniature Bipin and Medium Bipin Lamps, add jumper between socket contacts, of the lampholder, before connecting the RED and YELLOW wires.

Connections

4-Pin Wiring Diagram (Single Ended)

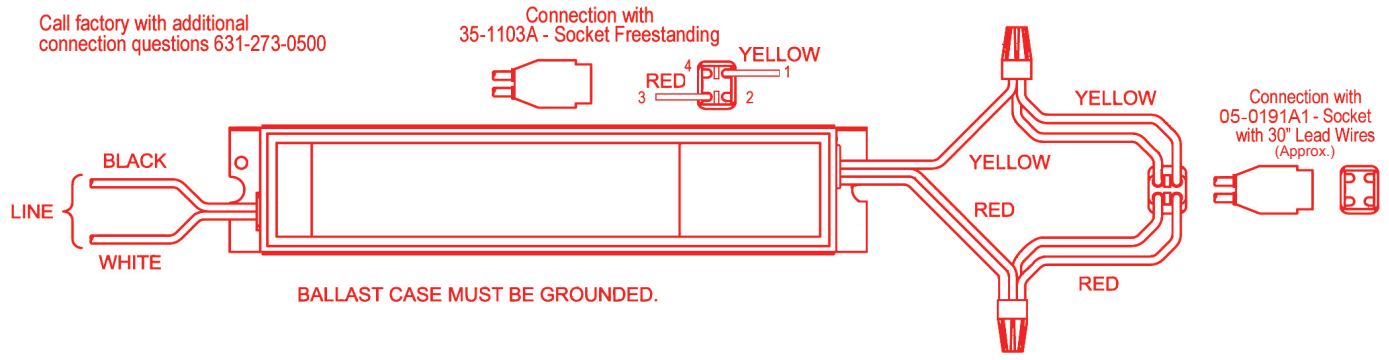

Typical Instant Start Ballast Connections for Preheat Lamps

The information and recommendations contained in this publication are based upon data collected by the Atlantic Ultraviolet Corporation® and are believed to be correct. However, no guarantee or warranty of any kind, expressed or implied, is made with respect to the information contained herein. Specifications and information are subject to change without notice.